

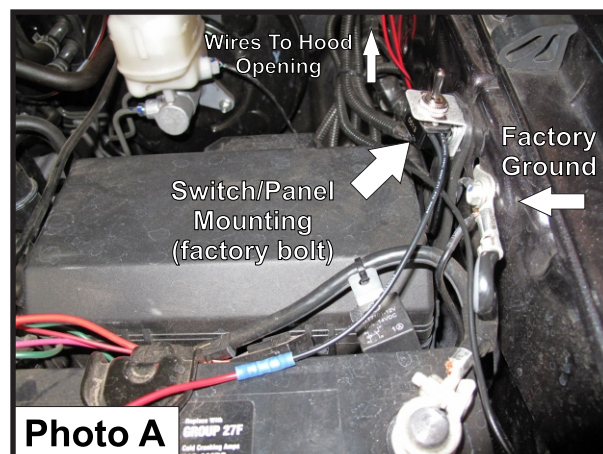
Thanks for choosing a KC HiLiTES product. We take pride in building the highest quality, best engineered systems possible. Your satisfaction with our product is important, so if you have any questions, please call our customer service line at 800-528-0950. **For warranty information, visit our website at www.kchilites.com.**

Parts Included

- | | |
|---|--------------------------|
| 2 - Cyclone LED | 6 - Wire ties |
| 1 - Harness with switch, panel and fuse | 2 ft - Protective tubing |
| 2 - Mounting screw and washer | |

MOUNTING THE SWITCH

1. Locate and remove the factory bolt (10mm head) from the fuse box lid under the hood (**photo A**) along the driver side fender. Install the switch panel here using the same bolt. *Do Not Over Tighten*. Install the switch with the wires pointing toward the battery. Install the weatherproof cap on the switch. Ensure the switch is in the off position.

**WIRING THE CYCLONE LEDS**

1. Route the two pairs of red and black wiring along the driver fender toward the windshield where the fender meets the under hood ventilation area.
2. Route the wires through the opening below the rubber seal and then through the hole in the corner of the hood. (**photo B**)
3. Feed the wires behind the hood support ribs to the first large opening. Leave the shorter pair hang loose and continue behind the ribs with the longer pair to the second opening on the passenger side.
4. Find a suitable location on the hood ribs, near the end of each the harness wires to mount your Cyclones. Drill 1/8" holes and attach Cyclones using supplied hardware. (**TAKE CARE NOT TO DRILL THROUGH AND DAMAGE THE HOOD OUTSIDE SURFACE**) Plug each of the Cyclones into the wire harness.
5. Back near the switch, attach the black ground wire to the factory ground (**photo A**) near the battery. Install the red power wire to the positive side of the battery.
6. Cover and secure wiring as needed with the supplied wire ties and tubing.

YOU'RE DONE